



Made in America Since 1968

RENTAL IN/OUT CHECKLIST

GP700

Each time the GP700 is rented out and returned, follow these steps to ensure it is in proper working condition.

Before conducting any maintenance procedures, make sure you are wearing proper safety equipment and the machine is disconnected from power.

**Refer to [Service Manual](#) for precise schedule*



- Ensure 7-gallon water tank is empty and clean
- Check that the forward/rear locking pitch adjustment is operational
- Check that the safety emergency stop key and lanyard are present and functioning
- Check single transport caster for damage
- All four removable weights on grinder base are present
- Check control box: soft start, forward/reverse, and variable speed functionality
- Check floating shroud and base seal brushes
- Ensure Morflex couplers are free of damage
- Using white lithium grease, grease the handle Zerk fittings if required.
- Ensure the dust collector hoses from grinder base to dust collector port are hooked up and free of damage
- Check frame and base for cracks or visible damage



**SCAN TO
ACCESS
YOUR
MANUAL**