



**Read Manual Before Operating or  
Servicing Machine**

401891-ROM Rev D

[www.romus.fr](http://www.romus.fr)  
[www.romusworld.com](http://www.romusworld.com)

THIS PAGE INTENTIONALLY LEFT BLANK

# Table of Contents

<b>Table of Contents</b> .....	<b>3</b>
<b>Features &amp; specifications</b> .....	<b>4</b>
<b>Safety</b> .....	<b>5</b>
General Rules for Safe Operation .....	5
Walk-Behind Scraper Safety Guidelines .....	6
Hydraulic Safety .....	7
Electrical Practices .....	8
<b>Components and Assembly</b> .....	<b>9</b>
Transportation .....	9
Wheel Modes .....	9
Application Setup .....	10
Installing and Adjusting Slide Weights .....	10
<b>Operation</b> .....	<b>11</b>
Operating Controls .....	11
Start-Up Procedure .....	11
Preparing Blades .....	11
<b>Troubleshooting Guide</b> .....	<b>13</b>
<b>Maintenance</b> .....	<b>14</b>
Wheel Cleaner Adjustment .....	14
Wheel Removal .....	14
Adding or Changing Hydraulic Fluid .....	14
Inspection of Internal Parts .....	14
Tank Removal .....	15
Power Cord .....	15
Isolators .....	15
Cutting Head Bearing .....	15
Maintenance Schedule .....	16
<b>Parts List and Diagrams</b> .....	<b>17</b>
Overall Machine .....	17
Base Assembly .....	18
Body .....	19
Weights .....	20
Tank .....	21
Cutting Head .....	22
Bottom and Back Covers .....	23
Motor Assembly .....	24
Motor Parts .....	25
Pump .....	26
Hydraulic Motor Assembly .....	27
Eccentric, Chain and Belt .....	28
Idler Assembly .....	29
Wheels .....	30
Front Wheel Assembly .....	31
Handle Assembly .....	32
Front Cover .....	33
Lower Sub-Assembly .....	34
Hydraulic Hoses .....	35
Lever .....	36
Adjustment Rod .....	37
Speed Control Knob .....	38
Labels .....	38
Wiring Diagram .....	39
Hydraulics .....	40



Note: The subjects dealt with in this manual are those expressly required by “Machine Directive 2006/42/EC” and the technical details shown are those provided by the manufacturer at the time of compilation.

# Features and Specifications



## FEATURES

**Speed Control Knob** - Limits maximum forward speed.

**Kickstand** - Aids operator in tilting the machine back for easier moving and maneuvering.

**Traction Wheels** - Self-cleaning industrial-grade wheels that disengage for loading/unloading.

**Slide Weights** - Applies additional pressure to the scraper head or more traction to the wheels as needed.

**Forward/Reverse Handles** - Controls both speed and direction of scraper with simple twist grips.

**Lifting Bail Eyebolts** - Eases loading/unloading.

**Debris-Deflecting Front Weight** - Prohibits material and debris from obstructing production.

**Quick-Adjust Multi-Position Handle** - Folds flat over machine for storage or transport; allows adjustment of handle angle to suit operator or work conditions.

## Product Specifications

Width	Length	Height	Weight (Machine Only)	Weight*	Motor Power	Vibration		
						X Axis	Y Axis	Z Axis
45 cm	130 cm (max. length)	117 cm (max. height)	152.0 kg	192.8 kg	1.1 kW	3.2 m/s <sup>2</sup>	6.3 m/s <sup>2</sup>	4.8 m/s <sup>2</sup>
	74 cm (handle folded)	76 cm (handle folded)						
Input Power		Amps (Full Load)	RPM	Speed				
230V / 50 Hz		8A	2850	0-20 m/min				

\*Includes removable weights.

## GENERAL RULES FOR SAFE OPERATION

Before use, anyone operating or performing maintenance on this equipment must read and understand this manual, as well as any labels packaged with or attached to the machine and its components. Read the manual carefully to learn equipment applications and limitations, as well as potential hazards associated with this type of equipment. Keep manual near machine at all times.

### Personal

#### **Dress properly and use safety gear.**

Do not wear loose clothing; it may be caught in moving parts. Anyone in the work area must wear safety goggles or glasses and hearing protection. Wear a dust mask for dusty operations. Hard hats, face shields, safety shoes, etc. should be worn when specified or necessary.

#### **Maintain control; stay alert.**

Keep proper footing and balance, and maintain a firm grip. Observe surroundings at all times. Do not use when tired, distracted, or under the influence of drugs, alcohol, or any medication that may cause decreased control.

#### **Keep hands away from all moving parts and tooling.**

Wear gloves when changing tooling. Remove tooling when machine is not in use and/or lower cutting head to the floor.

#### **Do not force equipment.**

Equipment will perform best at the rate for which it was designed. Excessive force only causes operator fatigue, increased wear, and reduced control.

### Environment

#### **Avoid use in dangerous environments.**

Do not use in rain, damp or wet locations, or in the presence of explosive atmospheres (gaseous fumes, dust, or flammable materials). Remove materials or debris that may be ignited by sparks. Keep work area tidy and well-lit - a cluttered or dark work area may lead to accidents. Extreme heat or cold may affect performance.

#### **Protect others in the work area and be aware of surroundings.**

Provide barriers or shields as needed to protect others from debris and machine operation. Children and other bystanders should be kept at a safe distance from the work area to avoid distracting the operator and/or coming into contact with the machine. Operator should be aware of who is around them and their proximity. Support personnel should never stand next to, in front of, or behind the machine while the machine is running. Operator should look behind them before backing up.

#### **Do not come within 1 m of the machine's perimeter during operation.**

#### **Guard against electric shock.**

Ensure that machine is connected to a properly grounded outlet. Prevent bodily contact with grounded surfaces, e.g. pipes, radiators, ranges, and refrigerators. When scoring or making cuts, always check the work area for hidden wires or pipes.

### Maintenance & Repairs

#### **Begin maintenance work only when the machine is shut down, unplugged, and cooled down.**

#### **Use proper cleaning agents.**

Ensure that all cleaning rags are fiber-free; do not use any aggressive cleaning products.

#### **Schedule regular maintenance check-ups.**

Ensure machine is properly cleaned and serviced. Remove all traces of oil, combustible fuel, or cleaning fluids from the machine and its connections and fittings. Retighten all loose fittings found during maintenance and repair work. Loose or damaged parts should be replaced immediately; use only manufacturer's parts.

#### **Do not weld or flame-cut on the machine during repairs, or make changes to machine without authorization from manufacturer.**

### Equipment

#### **Use proper parts and accessories.**

Only use manufacturer-approved or recommended parts and accessories. Using any that are not recommended may be hazardous.

#### **Ensure accessories are properly installed and maintained.**

Do not permanently remove a guard or other safety device when installing an accessory or attachment.

#### **Inspect for damaged parts.**

Check for misalignment, binding of moving parts, loose fasteners, improper mounting, broken parts, and any other conditions that may affect operation. If abnormal noise or vibration occurs, turn the machine off immediately. Do not use damaged equipment until repaired. Do not use if power switch does not turn machine on and off. For all repairs, insist on only identical manufacturer replacement parts.

#### **Maintain equipment and labels.**

Keep handles dry, clean, and free from oil and grease. Keep cutting edges sharp and clean. Follow instructions for lubricating and changing accessories. Motor and switches should be completely enclosed at all times with no exposed wiring. Inspect cord regularly.

#### **Avoid accidental starting; store idle equipment.**

When not in use, ensure that the machine is unplugged; do not turn on before plugging in. Store in a dry, secured place. Remove tooling when storing, and keep away from children.

# Safety

---

## WALK-BEHIND SCRAPER SAFETY GUIDELINES

Before use, anyone operating this equipment must read and understand these safety instructions.

### Scraping

#### **Beware of hidden obtrusions.**

Watch out for hidden dangers and protrusions in flooring. Do not use on largely uneven surfaces.

#### **Observe location of electrical supplies and extension cords.**


Do not allow cutting heads to come into contact with any electrical supply or extension cord.

#### **Use correct tooling and accessories.**

Provide barriers or shields as needed to protect others from debris. After mounting tooling, check for proper alignment.

#### **Use for correct applications.**

Do not force equipment to do heavier duty work than it was made for.

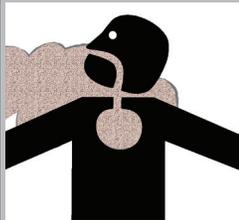

**WARNING:** GRINDING/CUTTING/DRILLING OF MASONRY, CONCRETE, METAL AND OTHER MATERIALS CAN GENERATE DUST, MISTS AND FUMES CONTAINING CHEMICALS KNOWN TO CAUSE SERIOUS FATAL INJURY OR ILLNESS, SUCH AS RESPIRATORY DISEASE, CANCER, BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. IF YOU ARE UNFAMILIAR WITH THE RISKS ASSOCIATED WITH THE PARTICULAR MATERIAL BEING CUT, REVIEW THE MATERIAL SAFETY DATA SHEET AND/OR CONSULT YOU EMPLOYER, THE MATERIAL MANUFACTURER/SUPPLIER, GOVERNMENTAL AGENCIES SUCH AS OSHA AND NIOSH AND OTHER AUTHORITIES ON HAZARDOUS MATERIALS. CALIFORNIA AND SOME OTHER AUTHORITIES, FOR INSTANCE, HAVE PUBLISHED LISTS OF SUBSTANCES KNOWN TO CAUSE CANCER, REPRODUCTIVE TOXICITY, OR OTHER HARMFUL EFFECTS. CONTROL DUST, MIST AND FUMES AT THE SOURCE WHERE POSSIBLE. IN THIS REGARD USE GOOD WORK PRACTICES AND FOLLOW THE RECOMMENDATIONS OF THE MANUFACTURER/SUPPLIER, OSHA/NIOSH, AND OCCUPATIONAL AND TRADE ASSOCIATIONS. WHEN THE HAZARDS FROM INHALATION OF DUST, MISTS AND FUMES CANNOT BE ELIMINATED, THE OPERATOR AND ANY BYSTANDERS SHOULD ALWAYS WEAR A RESPIRATOR APPROVED BY OSHA/MSHA FOR THE MATERIAL BEING CUT.

## HYDRAULIC SAFETY

### Maintaining a Safe Work Environment

Establishing a safe work environment in and around your hydraulic equipment is extremely important. The easiest and most effective way to avoid problems is to make sure associates understand their equipment, know how to operate the machines safely, and recognize the dangers if handled carelessly. A few things to be aware of are:

- **Pressure:** Hydraulic fluid under pressure is dangerous and can cause serious injury. Never look for a leak when unit is under pressure. Using your hand could cause serious injury. A few common ways to encounter hydraulic fluid under pressure include:
  - Pinhole: Fluid under pressure can cause serious injury. It can be almost invisible escaping from a pinhole, and it can pierce the skin into the body.



**DANGER:** DO NOT TOUCH A PRESSURIZED HYDRAULIC HOSE ASSEMBLY WITH ANY PART OF THE BODY. IF FLUID PUNCTURES THE SKIN, EVEN IF NO PAIN IS FELT, A SERIOUS EMERGENCY EXISTS. OBTAIN MEDICAL ASSISTANCE IMMEDIATELY. FAILURE TO DO SO COULD RESULT IN LOSS OF THE INJURED BODY PART OR DEATH.

- Leak: Keep fittings and hoses tight. Only check and service when not under pressure. Leaking hydraulic fluid is hazardous; in addition to making workplace floors slippery and dangerous, it also contaminates the environment. Before cleaning an oil spill, always check EPA, state, and local regulations.
- Burst: Whether due to improper selection or damage, a ruptured hose can cause injury. If it bursts, a worker can be burned, cut, injected, or may slip and fall.
- Coupling Blow-Off: If the assembly is not properly made or installed, the coupling could come off and hit or spray a worker, possibly resulting in serious injury. Never operate machine without guards.
- **Flammability:** When ignited, some hydraulic fluids can cause fires and/or explode. With the exception of those comprised primarily of water, all hydraulic fluid is flammable (including many “fire-resistant” hydraulic fluids) when exposed to the proper conditions. Leaking pressurized hydraulic fluids may develop a mist or fine spray that can flash or explode upon contact with a source of ignition. These explosions can be very severe and could result in serious injury or death. Precautions should be taken to eliminate all ignition sources from contact with escaping fluids, sprays or mists resulting from hydraulic failures. Sources of ignition could be electrical discharges (sparks), open flames, extremely high temperatures, sparks caused by metal-to-metal contact, etc.



**CAUTION:** NEVER USE YOUR HANDS TO CHECK FOR LEAKS OVER HOSE OR HYDRAULIC CONNECTIONS. USE A PIECE OF CARDBOARD TO LOCATE A PRESSURIZED LEAK. FOR LOW PRESSURE LEAKS (DRIPS), USE A RAG TO CLEAN THE AREA AND DETERMINE WHERE THE LEAK ORIGINATES.

- **Mechanical:** Hydraulic fluid creates movement, which means some equipment may move. Observe surroundings and equipment at all times.
- **Moisture:** Do not use in wet or high moisture conditions.
- **Electrical:** Faulty wiring can be an electrical hazard. A regular preventive maintenance program should always include a wiring check. If applicable, disconnect battery before servicing.
- **Temperature:** Because this machine operates at a relatively low pressure, overheating is not common. If surface of tank becomes too hot to touch by hand (above 55°C), shut off machine and allow it to cool.

### Hydraulic Fluid

Only use Texaco Rando 46 Hydraulic Oil or compatible fluid like ISO or AW #46 from a brand name manufacturer. Non-compatible fluids could cause damage to unit or serious injury.

# Safety

## ELECTRICAL PRACTICES



**WARNING:** ELECTRICAL CORDS CAN BE HAZARDOUS. MISUSE CAN RESULT IN FIRE OR DEATH BY ELECTRICAL SHOCK. READ CAREFULLY AND FOLLOW ALL DIRECTIONS.



**CAUTION:** ALWAYS FOLLOW APPLICABLE ELECTRICAL CODES, STANDARDS AND/OR REGULATIONS. CONSULT YOUR LOCAL ELECTRICAL AUTHORITY OR A LICENSED ELECTRICIAN BEFORE ATTEMPTING TO MODIFY AN ELECTRICAL INSTALLATION. ENSURE THAT CIRCUIT AND GROUND FAULT PROTECTION DEVICES AND ALL OTHER ELECTRICAL SAFETY EQUIPMENT ARE FUNCTIONING PROPERLY.

## Extension Cord Requirements



**WARNING:** GROUND YOUR EQUIPMENT. THE EQUIPMENT MUST BE PLUGGED INTO AN APPROPRIATE OUTLET, ONE WHICH IS PROPERLY INSTALLED AND GROUNDED IN ACCORDANCE WITH ALL CODES AND ORDINANCES. DO NOT MODIFY THE PLUG PROVIDED WITH THE EQUIPMENT. NEVER REMOVE THE GROUNDING PRONG FROM THE PLUG.



**WARNING:** DO NOT REMOVE, BEND OR MODIFY ANY METAL PRONGS OR PINS OF THE PLUG. MODIFICATIONS TO POWER CORDS AND/OR PLUGS MAY RESULT IN INJURY AND/OR EQUIPMENT DAMAGE.

- Ensure the cord type is suitable for the application and location. If you are unsure about your cord type, consult a qualified electrical professional or electrician.
- FULLY INSERT plug into outlet.
- Do not use excessive force to make connections.
- Never unplug by pulling the cord from the outlet. Pull plug rather than cord to reduce the risk of damage.
- Regularly examine your extension cord and ensure it is in good electrical condition. Never use a damaged cord—either replace it or have it repaired by a qualified person.
- Protect your extension cords from sharp objects, excessive heat and damp or wet areas. Keep the cord away from oil, cutting edges and moving parts.
- Do not drive, drag or place objects over cord.
- Avoid overheating. Uncoil cord and do not cover it with any material.
- Avoid accidental starting. Be sure equipment is turned off before plugging in. Do not use equipment if the power switch does not turn the equipment on and off.
- Make sure equipment is not running before disconnecting cord.
- Unplug equipment. When not in use and before changing accessories or performing maintenance, unplug the machine.

## Extension Cord Selection

All cords should be sized appropriately to reduce the risk of damage, fire or reduced performance. Reference the table below for cord sizes.

Wire Size	Max Length
16 AWG (1.5 mm <sup>2</sup> )	60 m
14 AWG (2.5 mm <sup>2</sup> )	120 m

**Note:** These cord sizes are based on a <10% voltage loss, data from the U.S. National Electrical Code Tables 400.5(A) & 400.5(B) and typical resistances for copper wire.

# Components and Assembly

## TRANSPORTATION

### Attach/Remove Transport Wheels



**WARNING:** NEVER HAVE TRANSPORT WHEEL ASSEMBLY MOUNTED ON MACHINE OR WHEELS DISENGAGED WHEN GOING UP OR DOWN A LOADING RAMP OR INCLINE. FAILURE TO DO SO COULD CAUSE LOSS OF CONTROL, DAMAGE TO MACHINE OR PROPERTY, OR SERIOUS INJURY.

Transport wheels help eliminate damage to the flooring and make moving the machine easier. To attach transport wheels, complete the following steps:

1. Remove two outside blade cover bolts (Figure 1).
2. To ensure cutting head has enough clearance for front wheel assembly to fit under, tip machine back and block up the front (Figure 1.1).
3. Mount front wheel assembly over blade cover; re-place two outside blade cover bolts (Figure 1.2).
4. Remove blocks.

**Note:** Do not leave machine in transport mode during transit without being secured.

To remove, reverse these steps.

### Lifting Bail

The lifting bails make loading/unloading easier when unable to use a ramp. Location of lifting bails centers the balance of the machine, making it safe to pick up machine.

1. Place rope, hook system, or chain through eyelets located on top of machine.
2. Raise machine with a fork lift or winch.
3. Slowly lower to desired location.

### Ramp Unloading

1. Put the wheels in “engage mode” (Figure 2).
2. Position ramp securely to back of vehicle; ensure there is good contact.
3. Position machine at the back of the truck, in line with the ramp.
4. Carefully move machine onto ramp, leaving the cutting head down (in contact with ramp surface). Be cautious; machine is heavy.
5. Slowly back machine down ramp.



**CAUTION:** REMOVE ALL COUNTER WEIGHTS AND BLADES AND ENSURE WHEELS ARE IN “ENGAGE MODE” (FIGURE E) BEFORE LOADING OR UNLOADING. FAILURE TO DO SO COULD RESULT IN PROPERTY DAMAGE AND/OR PERSONAL INJURY.

## WHEEL MODES

Wheels engage and disengage for easier maneuverability. Wheels in the “engage mode” are secured with axle pins (Figure 2), which engage the wheels so the machine can be self-propelled.

When wheels are in the “disengage mode” (Figure 2.1), the machine can be moved freely when not under power.

### Disengaging Wheels

1. Lift ring outwards; slide pin up and off.
2. Repeat on second wheel.

**Note:** Keeping the axle pin facing straight up will make re-engaging easier.



FIG. 1



FIG. 1.1



FIG. 1.2



FIG. 2



FIG. 2.1

# Components and Assembly

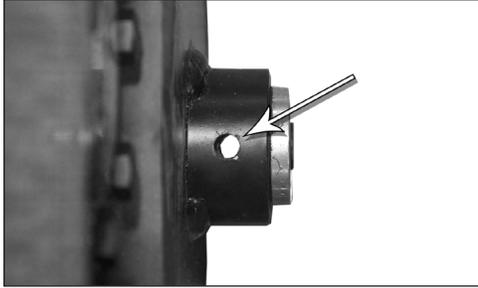


FIG. 3

## Re-engaging Wheels

1. Line up wheel hub hole and axle hole (Figure 3).
2. Insert pin and push ring over the hole so that it is parallel to the wheel.
3. Repeat on second wheel.

## APPLICATION SETUP

### VCT Tile

Never use a blade wider than the size of the tile being removed. If materials being removed still do not come up clean or machine jumps on top of materials, reduce blade size or use a smaller portion of the blade.

### Pure Vinyl Rubber Tile

Materials will need to be scored down to 25.4-30.5 cm for proper removal. Self-scoring blades can be used with some materials. A 25.4 cm blade is recommended for this application.

### Direct-Glued Carpet

Manufacturer recommends using a self-scoring blade. Normally 15.2-35.6 cm self-scoring blades are used on direct-glued carpet, secondary-backed, unitary, double-glued, vinyl foam and urethane foam.

### Concrete

When working on concrete slab, a normal blade position is bevel up for best performance, especially when cleaning adhesive. On occasion, bevel down gives better blade life. Test each job for best performance.

### Gypcrete and Soft-Poured Flooring

Requires blade bevel down to create a better wearing surface.

## INSTALLING AND ADJUSTING SLIDE WEIGHTS



**WARNING:** ALWAYS ENSURE THE HEX BOLTS ARE TIGHT AND THE SLIDE WEIGHTS ARE SECURE. UNSECURED WEIGHTS COULD SHIFT CAUSING BODILY INJURY. USE CAUTION IF LOOSENING THE HEX BOLTS—IF BACKED OUT TOO FAR, THE SLIDE WEIGHTS COULD DROP CAUSING BODILY INJURY.

### Installing Slide Weights

Orientate the slide weight with the long channel below the short channel. Install the long channel over the heads of the two Allen bolts. Holding the slide weight in place, install the hex bolt into the threaded hole aligned with the short channel. Tighten the hex bolt using a 3/4" socket wrench to secure the weight to the side of the machine.

### Adjusting Slide Weights

To adjust the slide weight forward or backward based on the job application, loosen the hex bolt using a 3/4" socket wrench and gently slide the weight to the desired position. After adjusting, retighten the hex bolt to secure the weight to the side of the machine.

## OPERATING CONTROLS

### Speed Control (Figure 4)

- Turn speed control knob clockwise to decrease maximum forward speed.
- Turn speed control knob counterclockwise to increase maximum forward speed.
- Speed control knob can be adjusted while machine is running.

### Forward/Reverse

- Push handles forward to move the machine forward.
- Pull handles backward to move the machine in reverse.



FIG. 4

## START-UP PROCEDURE

### Starting the Machine

1. Plug machine into power source.
2. Turn speed control knob to slowest position (Figure 4).
3. Press ON/OFF switch to the "ON" position.
4. Push or pull the handles to move the machine forward or backwards.

### Turning Off the Machine

Press ON/OFF switch to the "OFF" position to turn off machine.

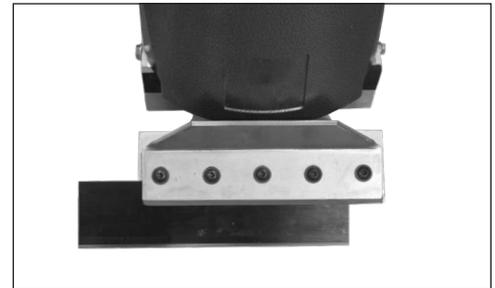


FIG. 5

## PREPARING BLADES



**CAUTION:** BLADES ARE SHARP. USE EXTREME CAUTION WHEN HANDLING. NEVER CHANGE CUTTING HEAD OR SERVICE BLADES WHILE MACHINE IS RUNNING. ALWAYS WEAR GLOVES WHILE HANDLING BLADES.

### Setting

**Note:** This machine is designed to remove soft good materials.

- Proper blade size and placement will affect performance, depending on the material and sub-floor type.
- For difficult materials, use smaller blades.
- Start with a narrow blade, then increase blade size to optimize cutting pass. Narrower blades work easier than wider blades and usually clean the floor better.
- Normally, bevel up is for concrete; bevel down is for wood.
- Keep blades sharp. Dull blades greatly affect the performance of the machine and reduce cutting ability. Sharpen or replace blades as needed.
- Keep work area clean and clear of debris. After removing a portion of material, move it out of the way.
- For wood or wood-like floors, pound down or remove any nails or metal obstructions to avoid blade damage.
- Blades can be offset in the cutting head for easier access to toe kicks or for removal along the wall (Figure 5).
- Sheet vinyl, solid vinyl, rubber tile, urethane, or PVC sheet roofing will need to be scored for best removal results. Using a self-scoring blade is recommended.

# Operation



FIG. 6

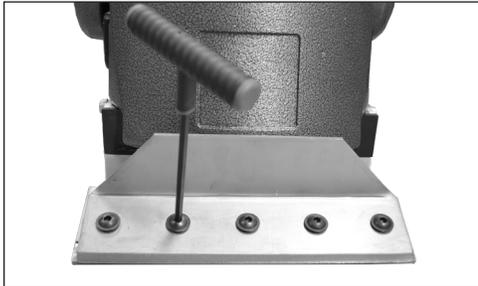


FIG. 6.1

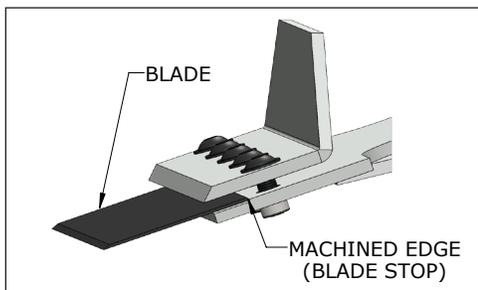


FIG. 6.2

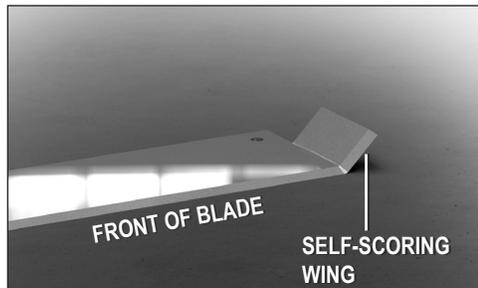


FIG. 7

- Self-scoring blades are available in a number of sizes; these blades eliminate the need for pre-scoring material. Depending upon the type of material being removed and the sharpness of the blade and scoring wings, the self-scoring blades may make it harder to control the machine. Keep scoring wings sharp at all times.

## Blade Changing

1. Block up the front of the machine (Figure 6) using a flat piece of wood or something similar.
2. Use the supplied extended 6 mm Hex wrench to keep hand safely away from the blade. Loosen the five hex drive bolts (Figure 6.1), it is not necessary to remove them completely.
3. Place blade into the cutting head and slide back until fully seated against the machined edge (Figure 6.2).

**Note:** Do not insert blade all the way back to the bolts. Incorrect installation of blade will cause insufficient clamping leading to premature blade wear and damage.

If the blade is wider than the cutting head, center the blade to the head. If the blade is smaller than the cutting head, the blade should be mounted in the center of the cutting head during the first pass. After the first pass is made, the blade can be offset in the head to allow the wheels to keep even contact with the floor and provide easy access to the wall.

4. Tighten the bolts.

# Troubleshooting Guide

Problem	Cause	Solution
Machine will not start.	Insufficient power.	Ensure use of properly rated extension cord.
	Loose capacitor leads.	Check capacitor leads to ensure good connection.
	Overload button on motor has been tripped.	Button is located on the bottom of the electric box on motor. If tripped, hold button in until it clicks.
	Faulty ON/OFF switch.	Replace if needed.
Machine will not move under power.	Speed control is set too slow.	Turn speed control knob counterclockwise until the machine goes forward.
	Wheels are not in the "engage mode".	Install wheel pins for "engage mode".
	Broken belt.	Remove wheels and bottom cover to inspect. Replace if needed.
	Broken chain.	Remove wheels and bottom cover to inspect; repair or replace if needed.
	Control handle mechanism failure.	Inspect control mechanism; repair or replace as needed.
Motor is humming, but machine does not run or breakers are blown.	Failed isolators.	Remove wheels and bottom cover to inspect.
	Failed capacitors.	Replace as needed.
	Motor start switch connections are dirty.	Remove fan cover and fan. Clean the motor start switch (set of points) with an emery board or cloth between the points; reassemble.
Machine is leaking hydraulic fluid.	Leak in hose(s).	Tighten; replace if needed.
	Hydraulic fittings are loose.	Tighten; replace if needed.
Motor is heating up.	Motor shaft is binding.	Remove wheels and cover to inspect isolators. Inspect cutting head bearing and eccentric to ensure that they are not binding. If issue continues, contact manufacturer for additional support.

# Maintenance

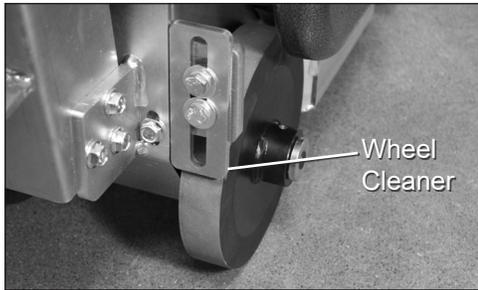


FIG. 1

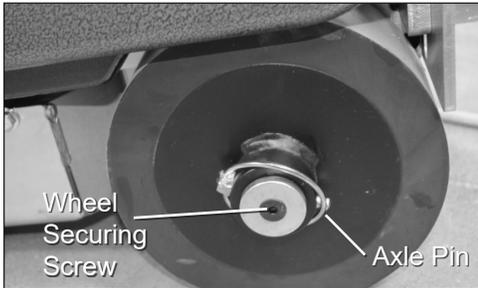


FIG. 2



FIG. 3

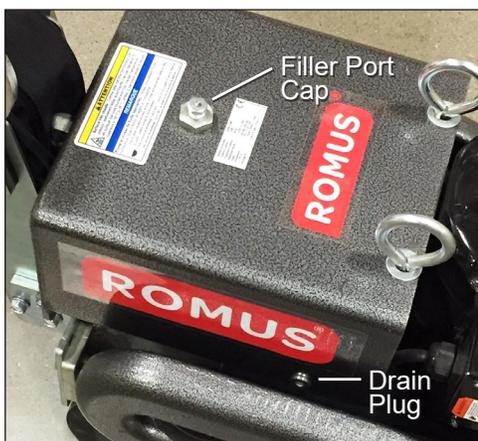


FIG. 4



**WARNING:** ALWAYS UNPLUG MACHINE BEFORE PERFORMING MAINTENANCE.

## WHEEL CLEANER ADJUSTMENT

1. Loosen wheel cleaner with 9/16" wrench (Figure 1).
2. Slide cleaner up to the face of the wheel until it touches, but does not dig into the wheel surface.
3. Re-tighten firmly. **Note:** Too much interference between the wheel and cleaner will damage wheel.

## WHEEL REMOVAL

1. Turn off and unplug machine.
2. Examine back of wheels for built-up debris.
3. Remove yarn build-up.
4. Place block under machine between wheels.
5. Disengage and remove axle pin (Figure 2).
6. Remove wheel-securing screw with a 5mm hex wrench (Figure 2).
7. Remove wheel-securing cap. Wheel will slide off.
8. Remove wheel spacer. This should be inspected at regular intervals.
9. Relubricate bearing inside wheel before reassembly.

## ADDING OR CHANGING HYDRAULIC FLUID

- Change or add fluid when needed; check fluid level if there has been a leak, damaged or ruptured hose, or a loose fitting. Fluid should be level with bottom of tank plug hole (Figure 3).
- **To add fluid**, unscrew filler port cap from top of machine (Figure 4); add fluid through a filter or funnel with a screen to keep fluid clean.
- **To change fluid**, remove filler port cap. Remove drain plug from side of machine (Figure 4). An 8 liter container will be needed to drain the fluid into. (Fluid will not be removed from hoses.) Regardless of the machine's straining system, add fluid through a filter or funnel with a screen to keep fluid clean.

## INSPECTION OF INTERNAL PARTS

Visual inspection of internal parts can be done without draining the tank.

1. Remove two lifting bail eyebolts and the two bolts from the back of the tank.
2. Carefully lift tank 8-10 cm.
3. Using a flashlight, inspect the drive chain, hoses, front seal on hydraulic motor, and suction and pressure line on pump.
4. If service is necessary, follow the procedure for tank removal.

## TANK REMOVAL

It is necessary to remove the tank in order to repair the pump, or to replace or service internal hoses.

1. Drain tank by removing the top filler port cap and drain plug on the side of the machine (Figure 4). An 8 liter container will be needed to drain the fluid into.
2. Replace drain plug and filler port cap.
3. Remove two lifting bail eyebolts and the two bolts from the back of the tank.
4. Disconnect return line on the back of the tank; carefully lift tank 8-10 cm and disconnect suction line. The tank can now be removed.

## POWER CORD

If the power cord is damaged, it must be replaced by the manufacturer or a qualified professional.

## ISOLATORS

### Inspection

1. Perform the wheel removal procedure to access the bottom cover.
2. Remove one wheel at a time; remove the bottom cover bolt behind each wheel.
3. Carefully remove the bottom cover to expose the underside.
4. Inspect the isolators from the side for damage or wear.

### Replacement

1. Remove the side slide weights, side weights, and front weight.
2. Loosen the seven socket head cap screws holding the isolators in place. Grip each isolator with locking pliers to aid in loosening.
3. Remove and replace each isolator. It is recommended adding red threadlocker to the threads of the cap screws when reinstalling.

## CUTTING HEAD BEARING

### Inspection

1. Perform the wheel removal procedure to access the bottom cover.
2. Remove one wheel at a time; remove the bottom cover bolt behind each wheel.
3. Carefully remove the bottom cover to expose the underside.
4. Inspect the cutting head bearing for damage or wear.

### Replacement

1. Remove the bottom cover.
2. Remove the cutting head bearing from the cutting head by removing the four bolts that hold down the bearing.
3. Replace the cutting head bearing and re-tighten the four bolts.
4. Place the bottom cover and re-tighten the eight bolts that hold the bottom cover in place.


# Maintenance

---

Maintenance To Be Performed	Interval			
	Daily	50 hrs	1000 hrs	2000 hrs
Inspect fasteners, wheels and blade holders for damage.	•			
Clean built-up glue and debris from wheels, front weight, and blade holder.	•			
Visually inspect internal parts.		•		
Inspect safety devices and switches (power cord, wheel cleaners, switches).		•		
Inspect and replace isolators.			•	
Inspect and replace cutting head bearing.			•	
Change hydraulic fluid.				•

# Parts List and Diagrams


## OVERALL MACHINE

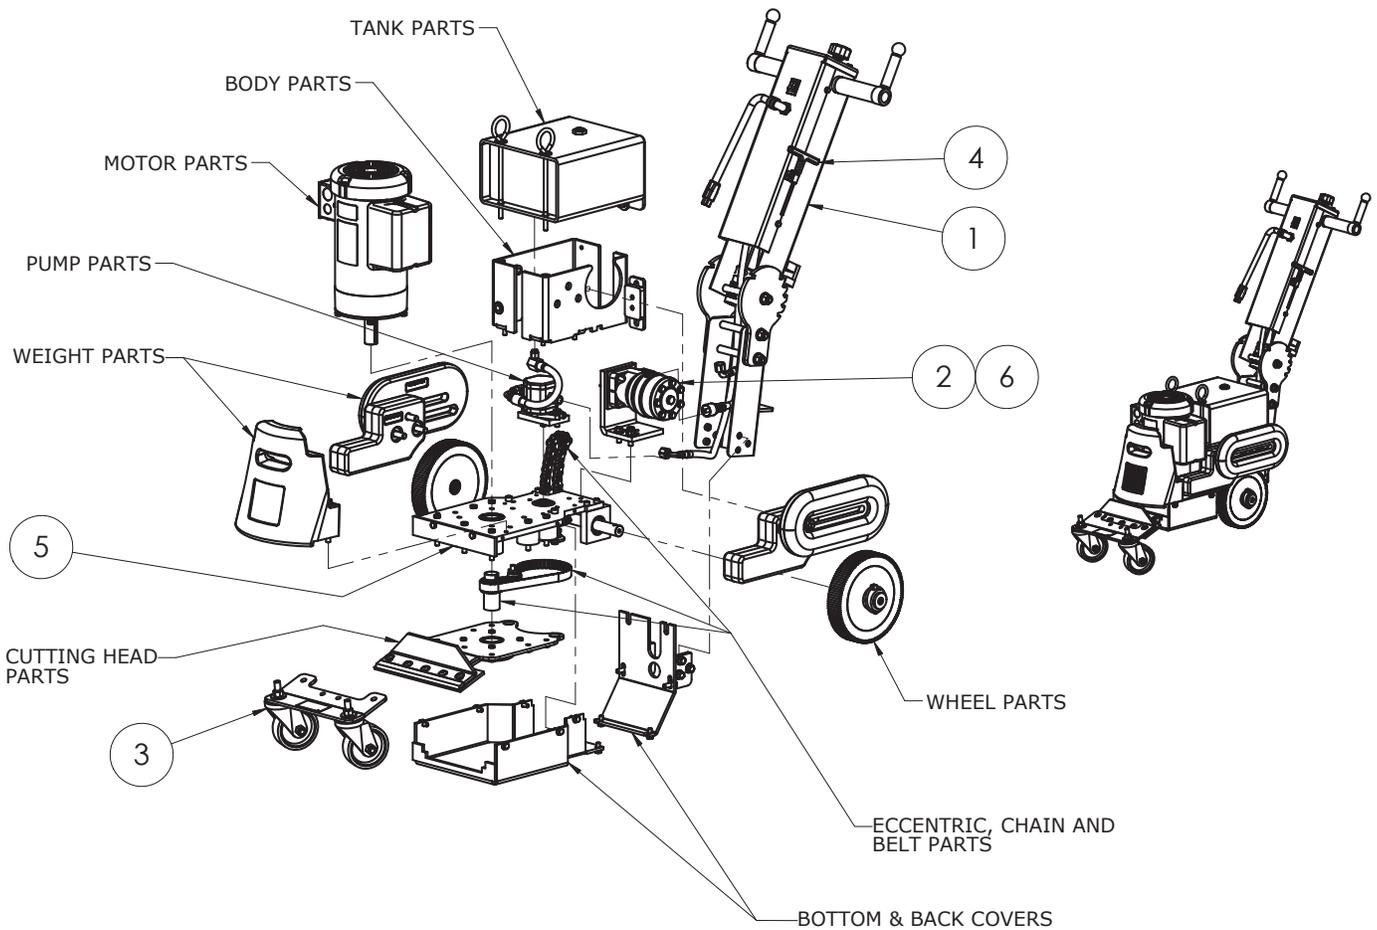

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	404581-011	Assembly, Commander Handle, EUR	1
2	401546	Motor, Hydraulic, Sub, 6280	1
3	6280-299	Wheel Assembly, Front	1
4	5280-137W	Wrench, Blade, 6mm	1
5	401639	Subassembly, Base, 6280, Metric	1
6	74650	Bolt, Wizlock, M10-1.5 x 25mm, Class 8.8	3

# Parts List and Diagrams

## BASE ASSEMBLY 401639

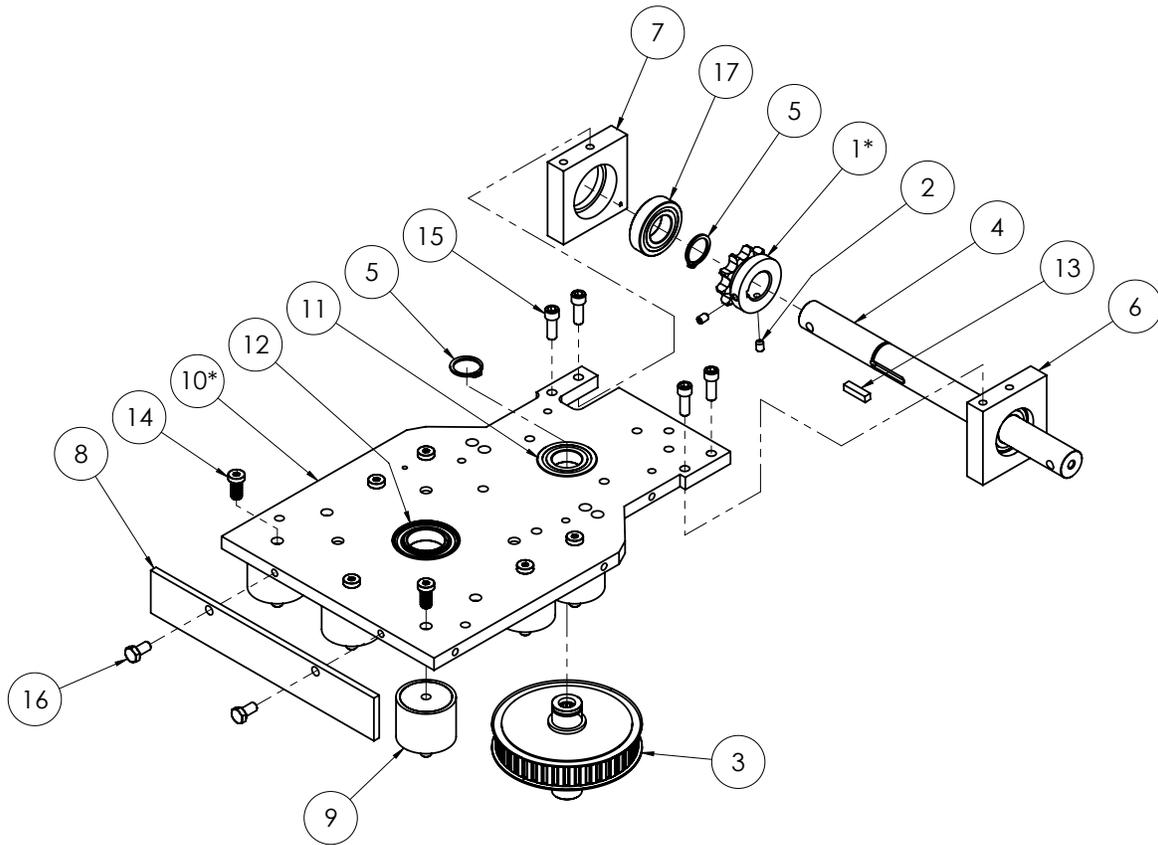


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1*	401541	Sprocket, Axle, Heavy Duty	1
2	73012	Screw, Set, Cup Point, 1/4-20x3/8	2
3	401627	Pump Drive Assembly, Splined	1
4	6280-103-1M	Shaft, Axle, Metric	1
5	6280-103A	Ring, Retaining, Axial, 1"	3
6	6280-105LM	Support, Axle Bearing, Metric, Left	1
7	6280-105RM	Support, Axle Bearing, Metric, Right	1
8	6280-145	Cover, Front	1
9	405950	Isolator, Vibration, 2 x 1-5/8, M/F, Neoprene	7
10*	404592	Assembly, Plate, Base, Metric, 6280	1
11	71115	Bearing, 1x2x1/2	1
12	71132	Bearing, 1-1/4	1
13	73033	Key, 1/4x1/4x1	1
14	73217	Screw, Socket Head Cap, Low, 3/8-16x3/4	7
15	73310	Screw, Socket Head Cap, 5/16-18x7/8, Black Oxide	4
16	74631	Bolt, Wizlock, M6-1.0 x 16, Plain	2
17	71115	Bearing, 1x2x1/2	2

\*Item 1 includes Item 2. Item 10 includes Items 11 and 12.

# Parts List and Diagrams


## BODY

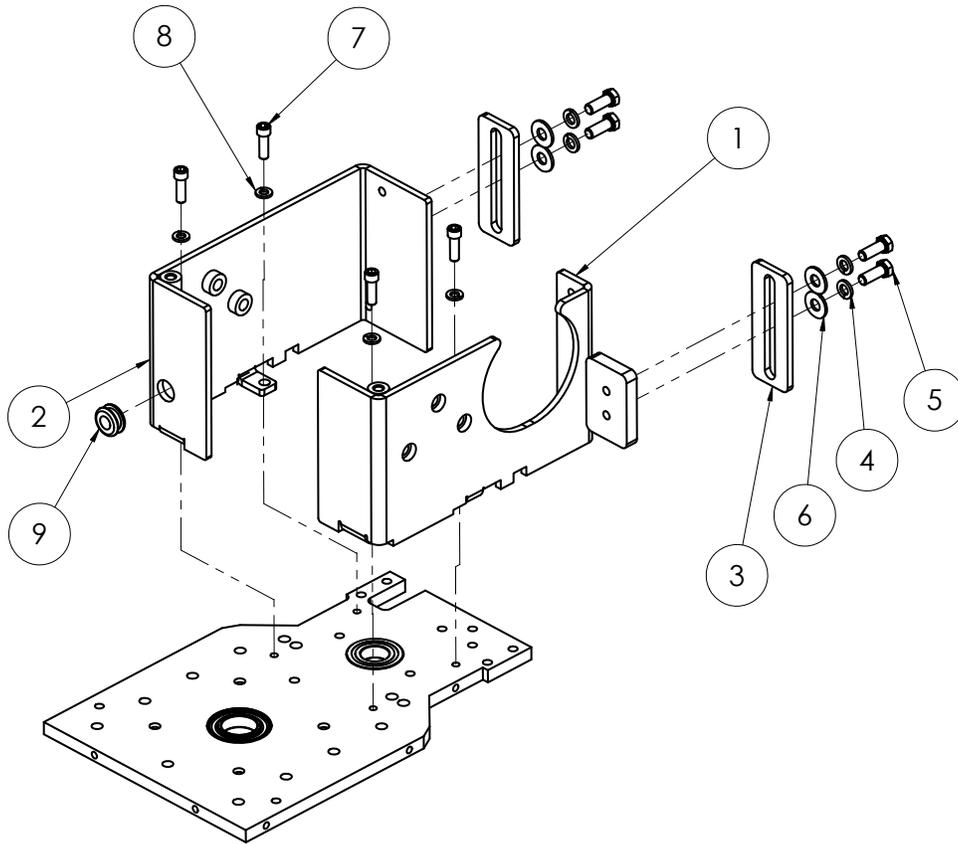

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	6280-156L	Body, Main, Upper, Left	1
2	6280-156R	Body, Main, Upper, Right	1
3	6280-165	Cleaner, Wheel	2
4	73204	Washer, Lock, 3/8	4
5	73201	Screw, Hex Head Cap, 3/8-16 x 1	4
6	73264	Washer, Flat, Zinc USS 3/8	4
7	401848	Screw, Socket Head Cap, M8-1.25x25, Black Oxide	4
8	73303	Washer, Split Lock, 5/16	4
9	74763	Grommet, Rubber 1/2"	1

# Parts List and Diagrams


## WEIGHTS

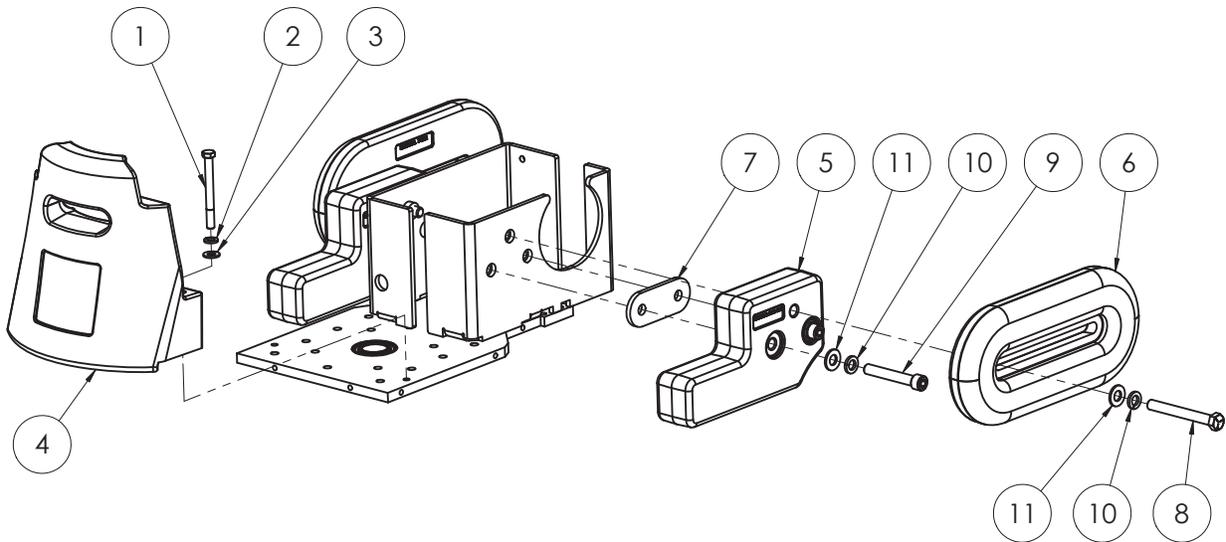

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	400184	Screw, Hex Head Cap, M10-1.5 x 90, Class 8.8, Clear Zinc	2
2	74657	Washer, Lock, M10	2
3	74655	Washer, Flat, M10	2
4	404745	Weight, Front, No Logo, Silver Vein	1
5	74853-BLK	Weight, Side, Black	2
6	74851-SV	Weight, Slide, Silver Vein	2
7	405980	Spacer, Side Weight, Commander	2
8	406618	Screw, Hex Head Cap, 1/2-13 x 4-1/4, Grade 5, Clear Zinc	2
9	406619	Screw, Socket Head Cap, 1/2-13 x 3-1/4, Black Oxide	4
10	73403	Washer, Split lock 1/2	6
11	73424	Washer, Flat, Zinc SAE 1/2	6

# Parts List and Diagrams


## TANK

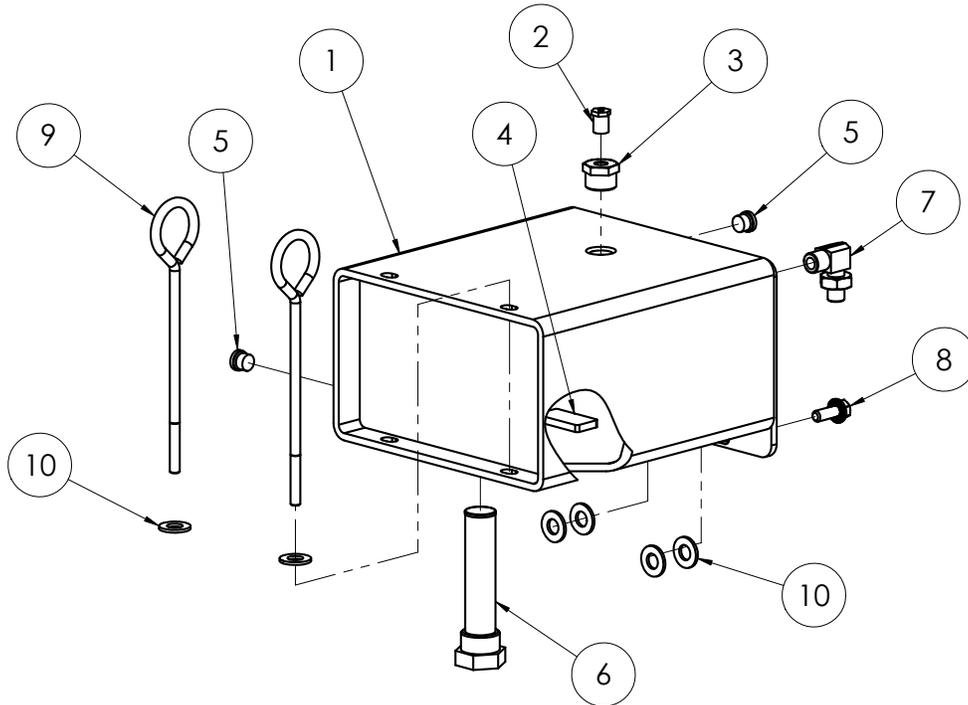

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	6280-162-SV	Tank, Hydraulic, Weldment, Silver Vein	1
2	6280-161B	Plug, Vent , Filler Cap	1
3	6280-161D	Plug, Filler Port	1
4	6280-162G	Magnet, Tank	1
5	6280-214	Plug, Tank	2
6	70601	Strainer, Tank Mounted	1
7	72816	Adapter, Hydraulic, 90 deg, -6M ORFS, -6M ORB	1
8	73222	Bolt, Wizlock, 3/8-16x1, Zinc Plated	2
9	403882	Eye Bolt, 1.50 ID, 3/8-16 x 8-1/2	2
10	401452	Washer, Flat, 1/2", SAE, Clear Zinc	6

# Parts List and Diagrams


## CUTTING HEAD

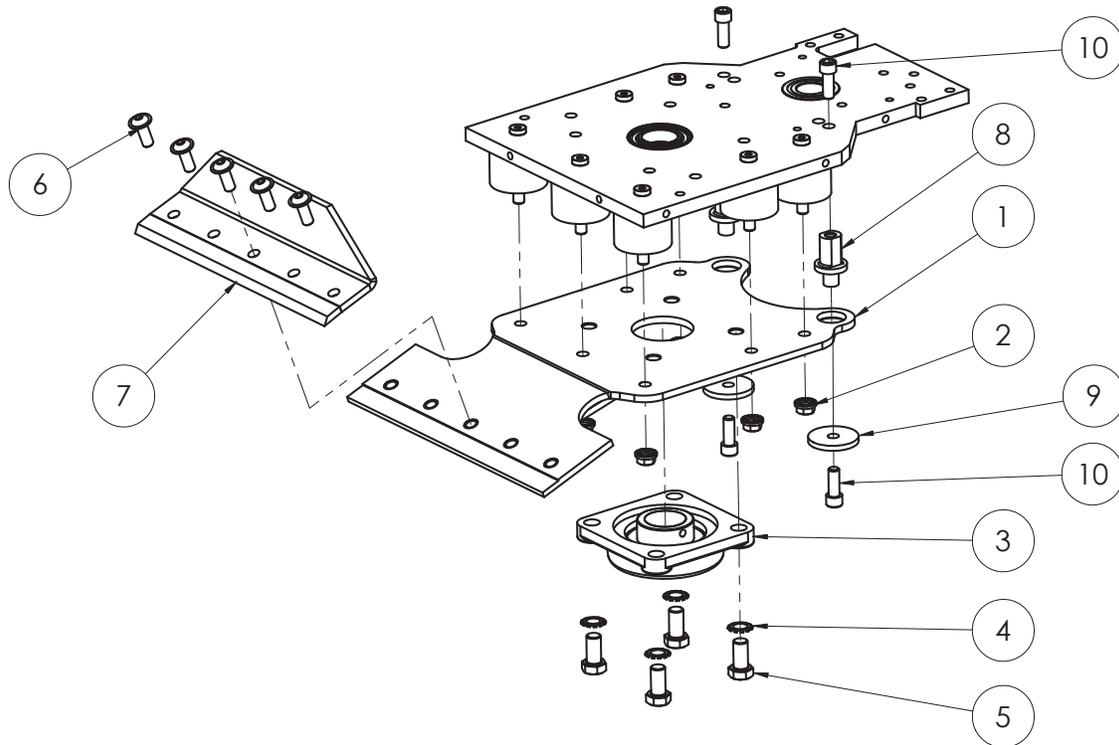

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	401638	Head, Cutting, Metric	1
2	73211	Nut, Flange, Serrated, 3/8-16	7
3	71141	Bearing, 1-7/16" ID 16SC4FB Dodge Housing Assy	1
4	73423	Washer, Interior/Exterior Lock 1/2"	4
5	73418	Screw, Hex Head Cap, 1/2-20x1	4
6	74649	Screw, Button Head Cap, M10-1.5x25, Flanged, Clear Zinc	5
7	6280-136	Cover, Blade	1
8	402893	Spacer, Stop, Cutting Head	2
9	404167	Stop, Washer, Thrust, Walk Behind	2
10	73266	Screw, Socket Head Cap 3/8-16x1	4

# Parts List and Diagrams


## BOTTOM AND BACK COVERS

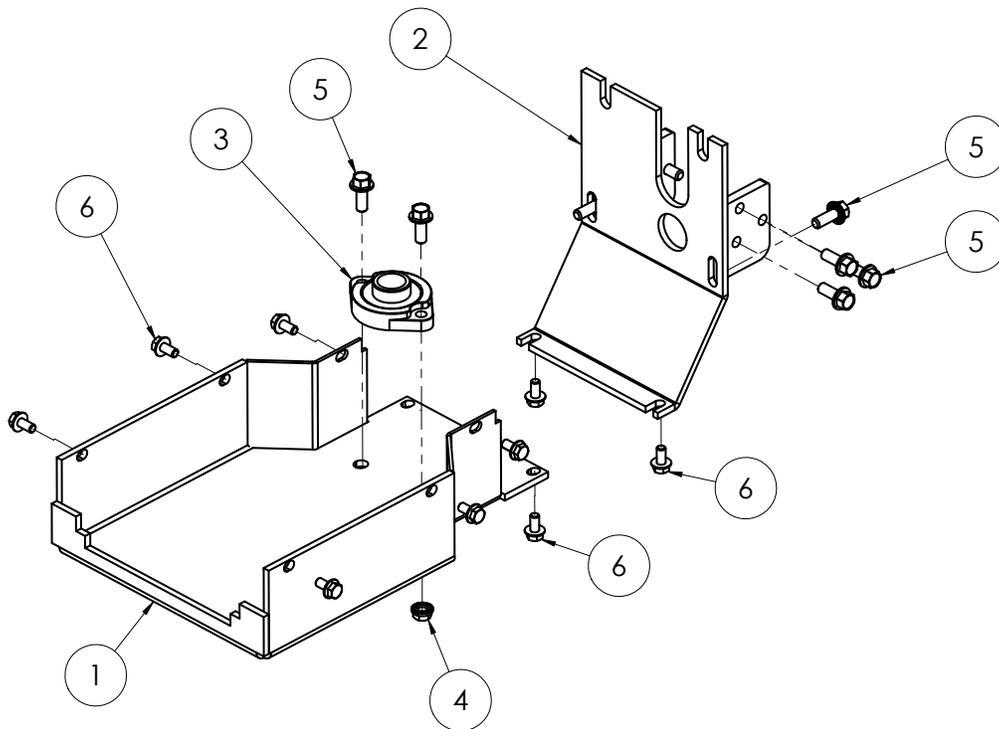

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	6280-138	Cover, Main Bottom	1
2	6280-139	Cover, Rear	1
3	71118	Bearing, Flange	1
4	73211	Nut, Flange, Serrated, 3/8-16	2
5	73222	Bolt, Wizlock, 3/8-16x1, Zinc Plated	10
6	74631	Bolt, Wizlock, M6-1.0 x 16, Plain	10

# Parts List and Diagrams

## MOTOR ASSEMBLY

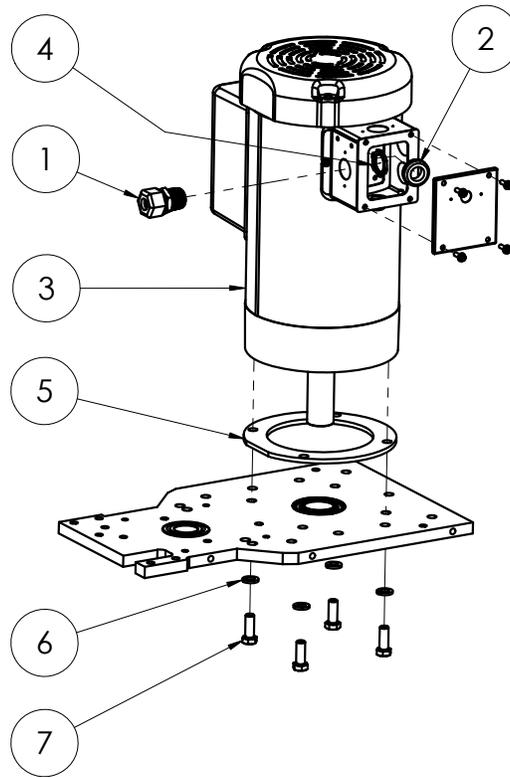


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	73502	Strain Relief, Straight 1/2 Inch, .3376-.5686	1
2	74730	Grommet, Rubber 5/8"	1
3	72367W	Motor, 230V, 1.5 HP, 116943	1
4	73401	Locknut, Conduit, 1/2"	1
5	6280-179	Ring, Motor Spacer	1
6	73204	Washer, Lock, 3/8	4
7	73201	Screw, Hex Head Cap, 3/8-16 x 1	4
8*	72810	Cap, Splice, Crimp, 10-18AWG, Non-Insulated	3
9*	72811	Insulator, Splice Cap, 10-18AWG, Nylon	3
10*	72821	Terminal, Ring, 16-14 Gauge, Nylon, 10 Stud	1
11*	72554-W	Cord Assembly, Motor, 220 Volt	1

\*Not shown

# Parts List and Diagrams

## MOTOR PARTS

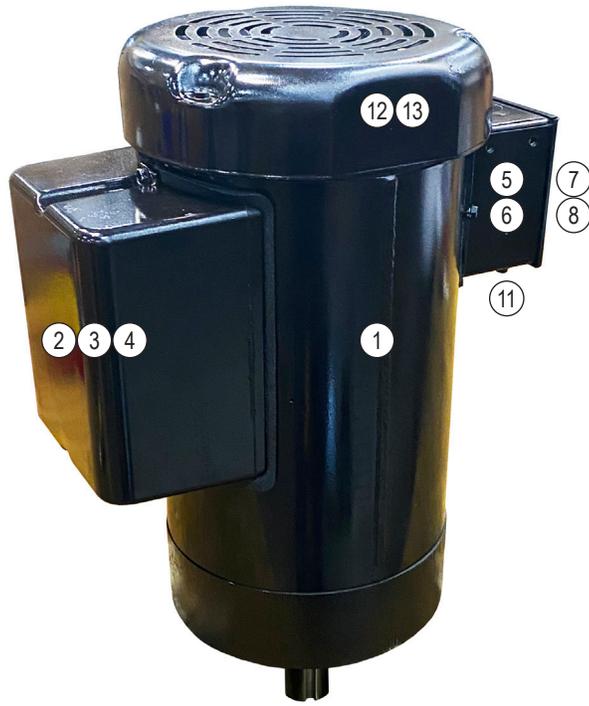


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	72367W	Motor, 230V, 1.5 HP, 116943	1
2	6280-151A	Capacitor, Motor (Run)	1
3	6280-151B	Capacitor, Motor (Start)	1
4	6280-150	Cover, Capacitor	1
5	401698	Box, Junction, Motor, 3" x 3.3"	1
6	401869	Gasket, Frame, Junction Box, 3x3.33"	1
7	401699	Cover, Junction Box, Motor, 3" x 3.3"	1
8	401870	Gasket, Cover, Junction Box, 3x3.33"	1
9*	6280-147-1	Switch, Starter	1
10*	6280-147-2	Actuator, Starter Switch	1
11	72461	Switch, Thermo Overload	1
12	62181	Fan, Motor	1
13	400001	Cover, Motor Fan, Top Mount Screws, Painted	1

\*Not shown

# Parts List and Diagrams


## PUMP

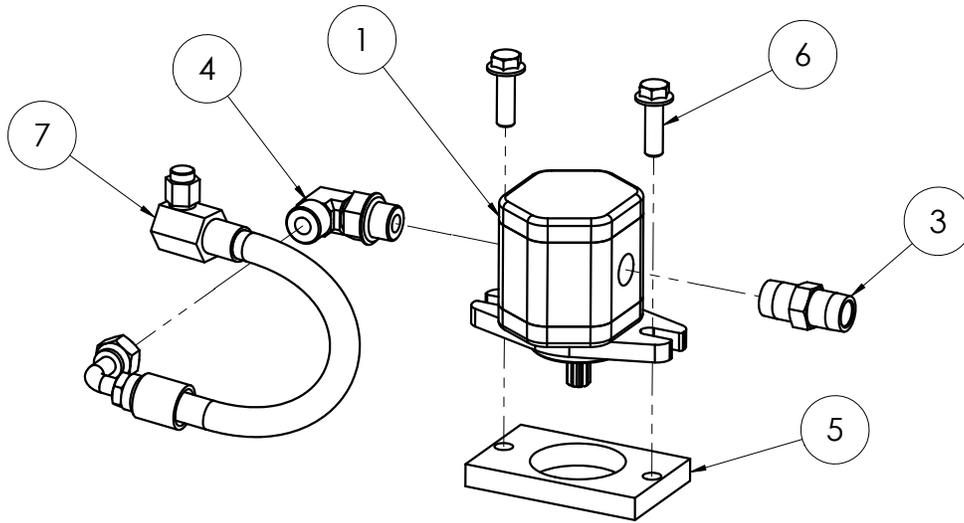

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	70925	Pump, Hydraulic, Single #7, Splined	1
3	6280-117	Fitting, Pump	1
4	6280-118	Adapter, Hydraulic, 90 deg, -8M ORFS, -8M ORB	1
5	6280-119	Spacer, Pump	1
6	73223	Bolt, Wizlock, 3/8-16x1-1/4	2
7	6280-120	Hose, Suction	1

# Parts List and Diagrams


## HYDRAULIC MOTOR ASSEMBLY 401546

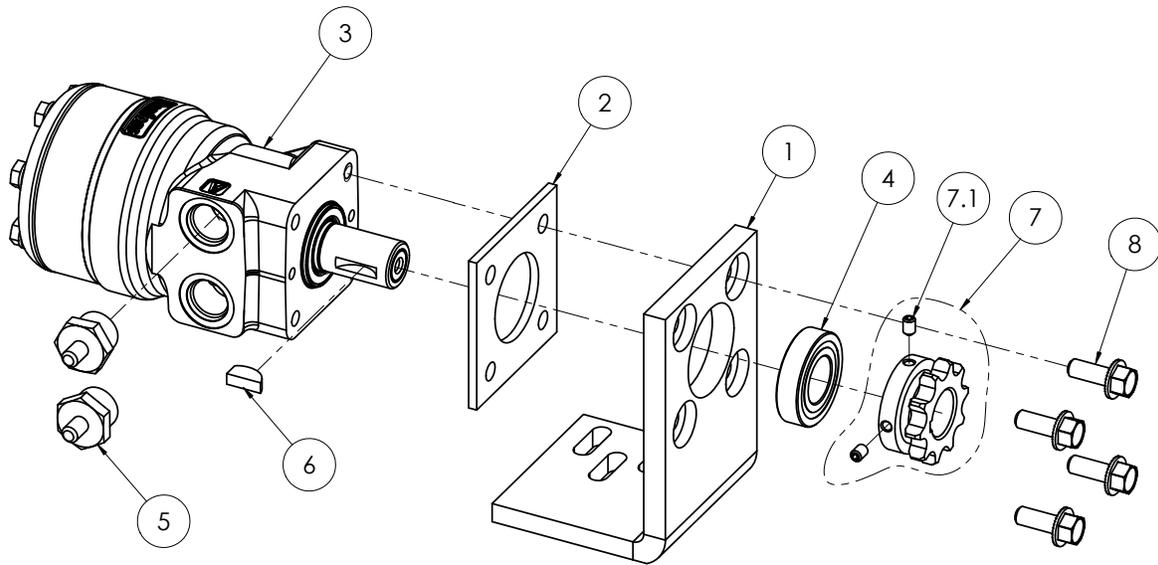

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	6280-226	Bracket, Mounting, Hydraulic Motor	1
2	6280-225	Spacer, Hydraulic Motor	1
3	405967	Motor, Hydraulic, 200CCM	1
4	71115	Bearing, Ball, 1 x 2 x .5	1
5	6280-221	Connector, Hydraulic Motor	2
6	6280-223	Key, Shaft, Hydraulic Motor	1
7	401541	Sprocket, Axle, Heavy Duty	1
7.1	73012	Screw, Set, Cup Point, 1/4-20x3/8	2
8	73222	Bolt, Wizlock, 3/8-16x1, Zinc Plated	4

# Parts List and Diagrams


## ECCENTRIC, CHAIN AND BELT

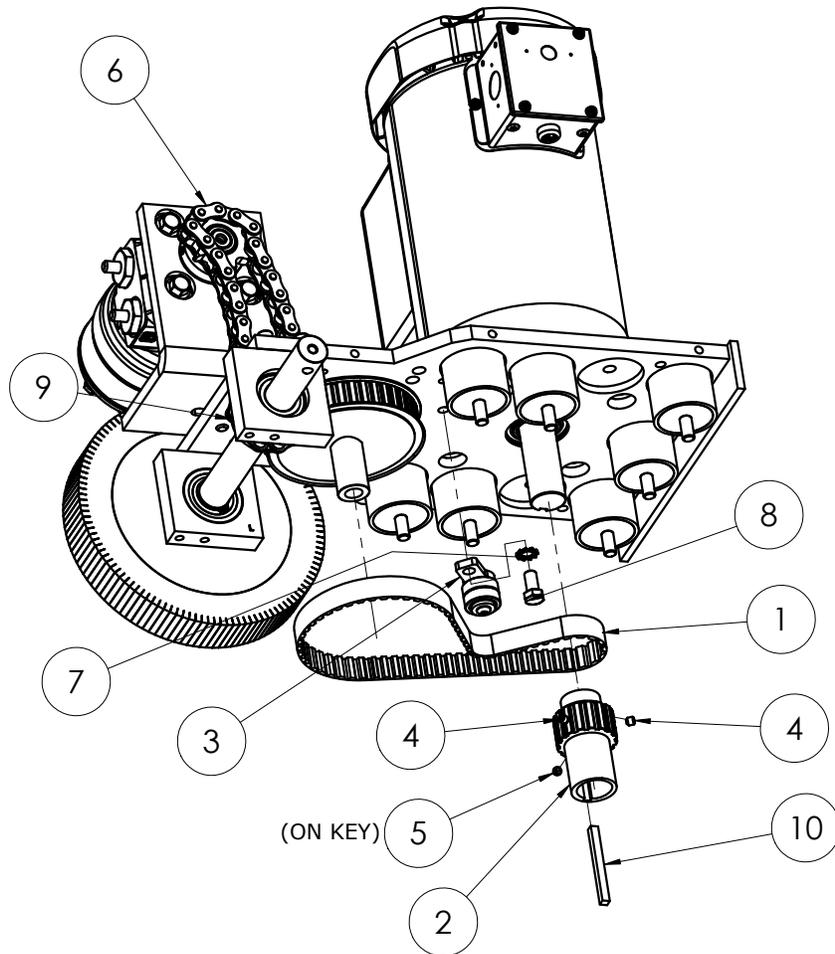

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	6280-124	Belt, Pump Drive, DD12	1
2	6280-405	Eccentric	1
3	6280-125	Assembly, Idler	1
4	73010	Screw, Set 1/4-20x1/4	2
5	73039	Screw, Set, 1/4-20x3/16	1
6	6280-228	Chain, Drive, #50 Strand, 30p, with Link	1
7	73215	Washer, External Lock 3/8	1
8	73218	Screw, Hex Head Cap, 3/8-24x3/4	1
9	6280-229	Link, Master, Drive Chain	1
10	6280HD-131	Key, Eccentric, HD	1

# Parts List and Diagrams


## IDLER ASSEMBLY 6280-125

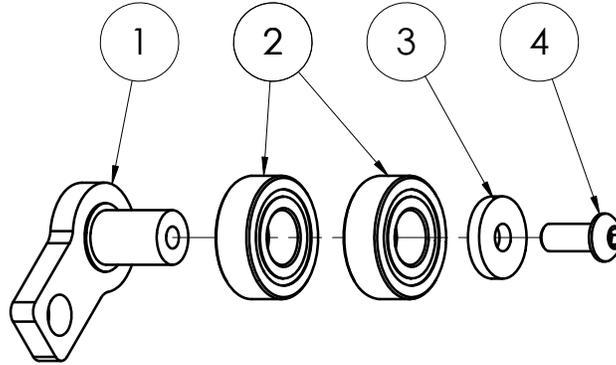

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	6280-125W	Bracket and Pin, Idler Mount	1
2	71072	Bearing, 1/2 ID DCTN-1616	2
3	6280-126A	Cap, Idler Bearing	1
4	73003	Screw, Button Head Socket Cap, 1/4-20x5/8	1

# Parts List and Diagrams


## WHEELS

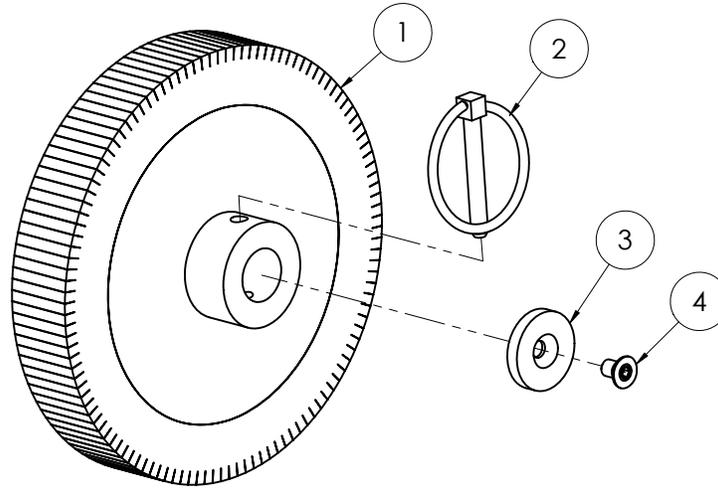

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	402591	Wheel, Drive, Siped, Medium Duty, 8.25 x 1.38	2
2	402311	Pin, Lynch, 5/16 x 2-1/16, Yellow Zinc	2
3	6280-112	Cap, Wheel	2
4	400342	Screw, Flat Head Socket Cap, M8 1.25 x 14mm	2

# Parts List and Diagrams


## FRONT WHEEL ASSEMBLY 6280-299

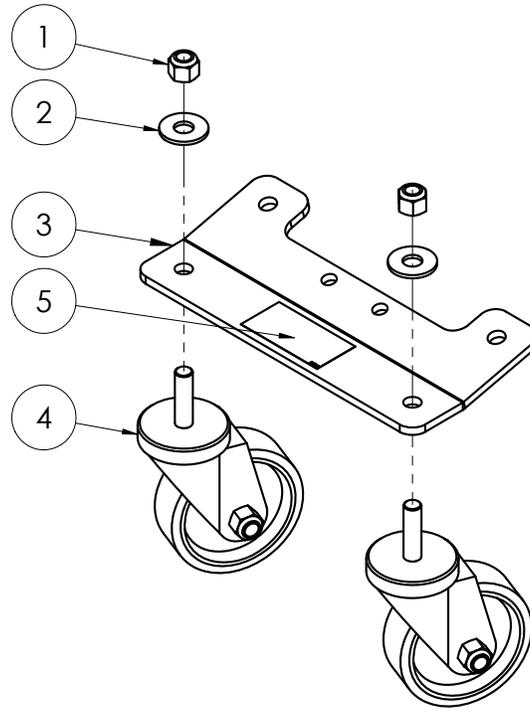

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	73402	Nut, Hex, Nylon Insert, 1/2-13	2
2	73425	Washer, Flat USS Zinc 1/2	2
3	6280-300	Bracket, Transport Wheel	1
4	6280-301	Caster Assy, Swivel, 4", Stem	2
5	L191	Label Caution	1

# Parts List and Diagrams


## HANDLE ASSEMBLY 404581-011

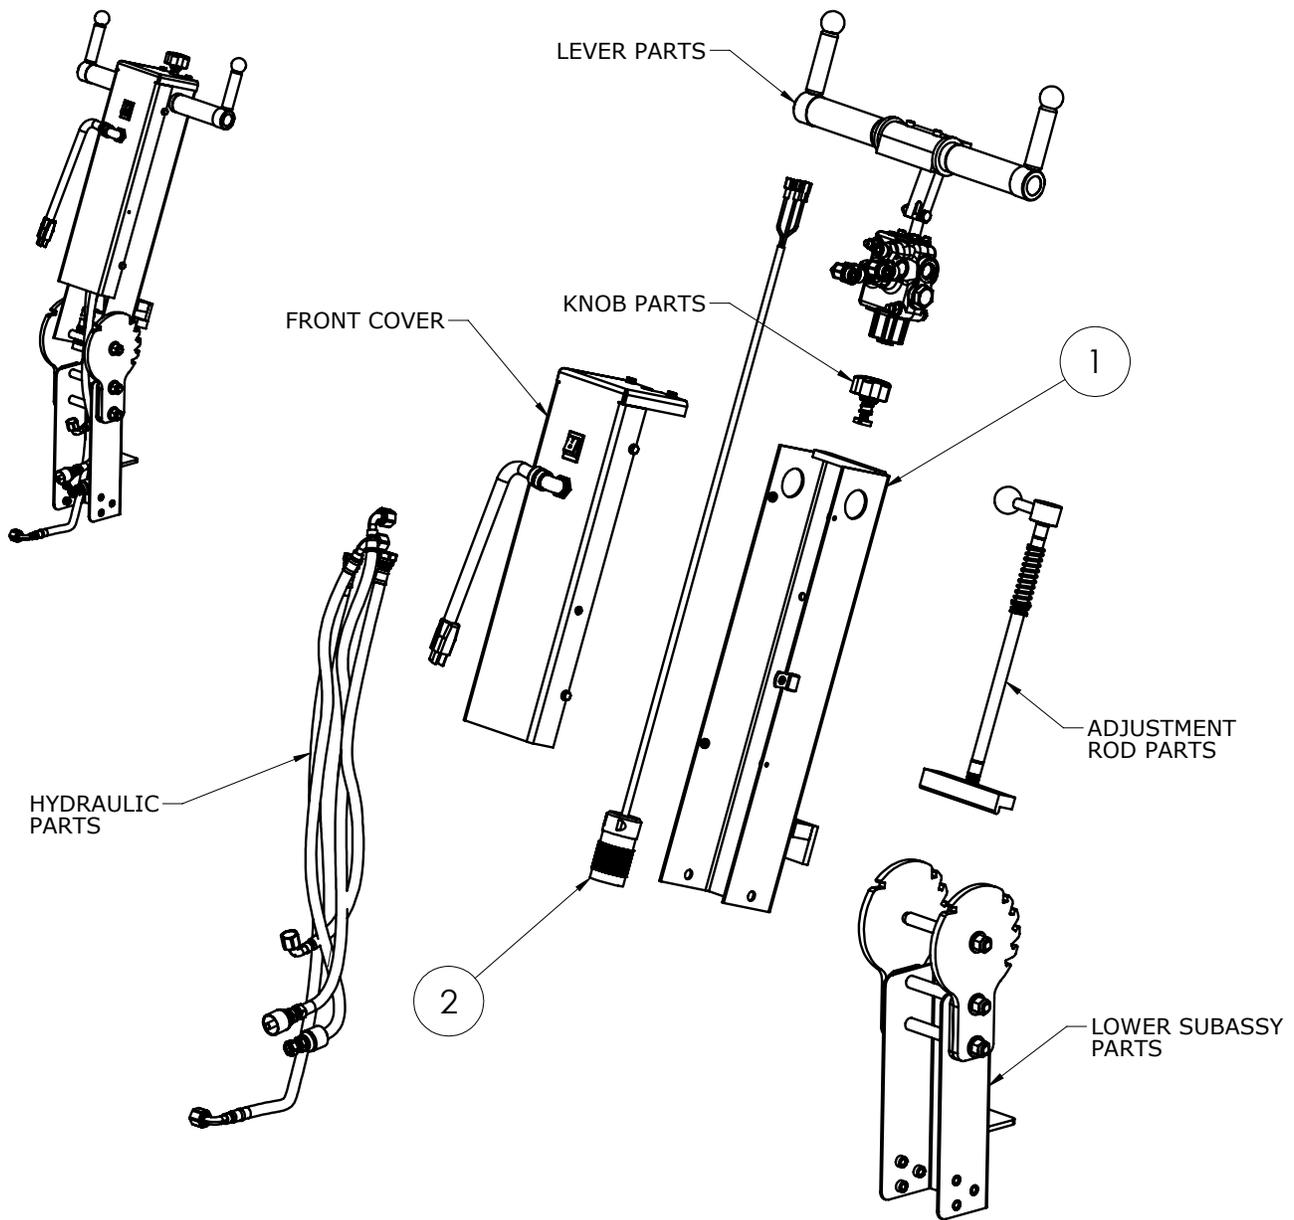

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	6280-601	Weldment, Upper Handle	1
2	404583-033	Assembly, Cord, Handle, 2.5mm/3, NEMA L6-15R, 33"	1

# Parts List and Diagrams


## FRONT COVER

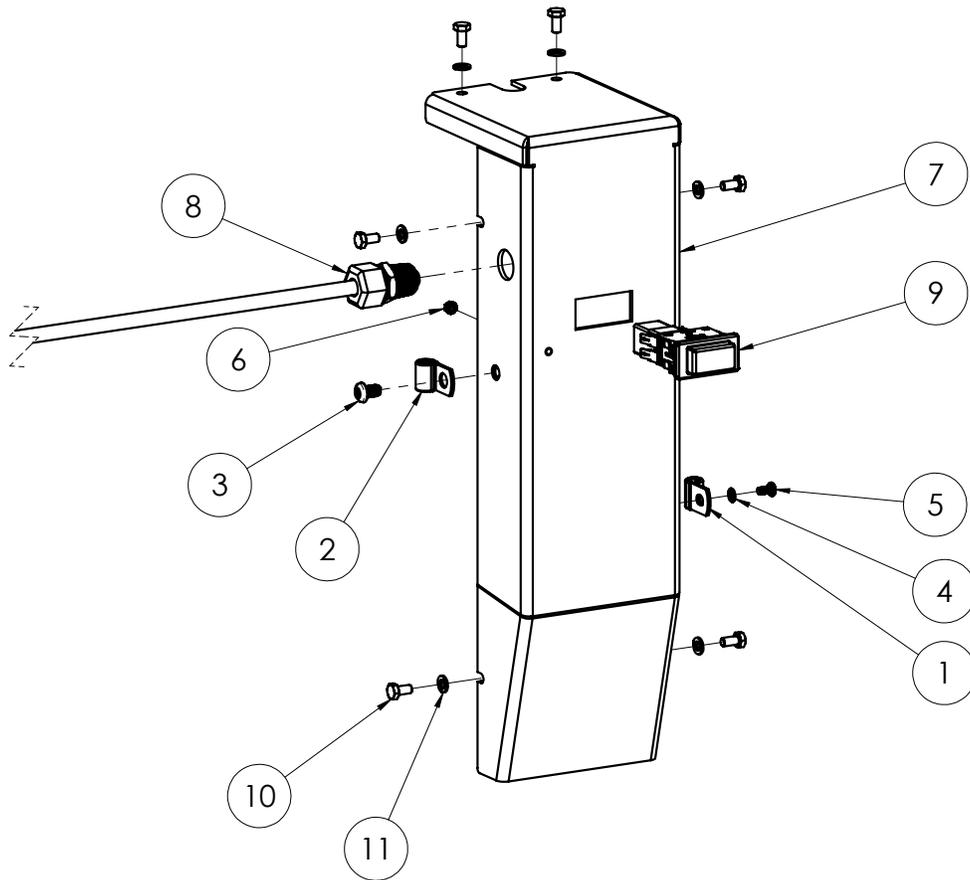

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	72837	Clamp, Cable, Vinyl Coated, 5/16	1
2	72873	Clamp, Cable, Vinyl Coated, 3/8	1
3	73301	Screw, Button Head Socket Cap, 5/16-18x1/2	1
4	74413	Washer, Internal Lock #10	1
5	74406	Screw, Phillips Pan Head, 10-32x3/8	1
6	403281	Nut, Keps, M4-0.7, Clear Zinc	1
7	404318	Cover, Upper Handle, CE	1
8	404172	Assembly, Cord, Power, 1.5mm <sup>3</sup> , EU1-16P, 15in	1
9	404180	Switch, Rocker Breaker, 10A, 220-240V, UVR	1
10	74630	Screw, Hex Head Cap, M6-12 8.8	6
11	74619	Washer, Lock, M6	6

# Parts List and Diagrams


## LOWER SUB-ASSEMBLY

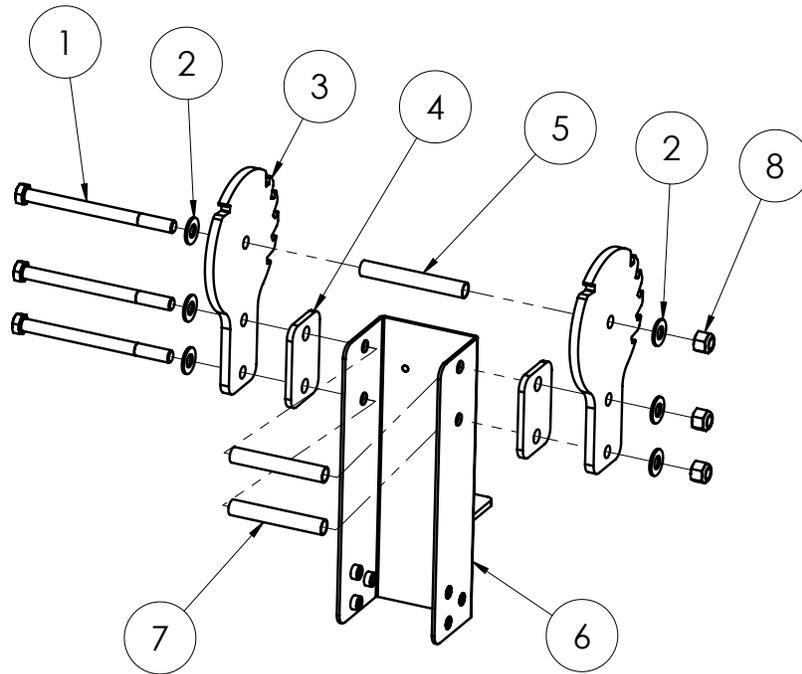

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	400056	Screw, Hex Head Cap, 1/2-13x6-1/2	3
2	73424	Washer, Flat, Zinc SAE 1/2	6
3	6280-600	Plate, Index, Handle	2
4	400077	Gasket, Handle	2
5	6280-618	Tube, Spacer, Long	1
6	401629	Handle, Lower, Rack Pins	1
7	6280-619	Spacer Tube, Short	2
8	73402	Nut, Hex, Nylon Insert, 1/2-13	3

# Parts List and Diagrams

## HYDRAULIC HOSES

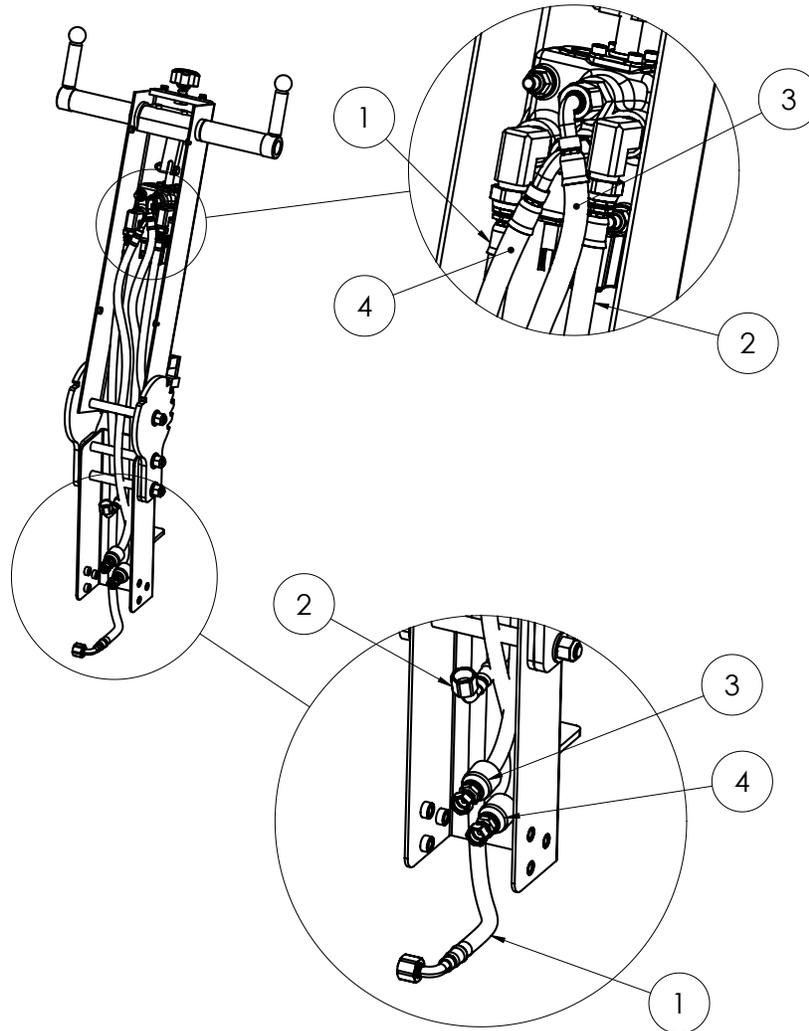


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	400031	Hose, Hydraulic, 1/4 x 40, F/90F	1
2	400033	Hose, Hydraulic, 3/8 x 36, F/F	1
3	400032	Hose, Hydraulic, 1/4 x 33, F/90F	1
4	400032	Hose, Hydraulic, 1/4 x 33, F/90F	1
5*	400097	Wrap, Kevlar	21"

\*Not shown

# Parts List and Diagrams


## LEVER

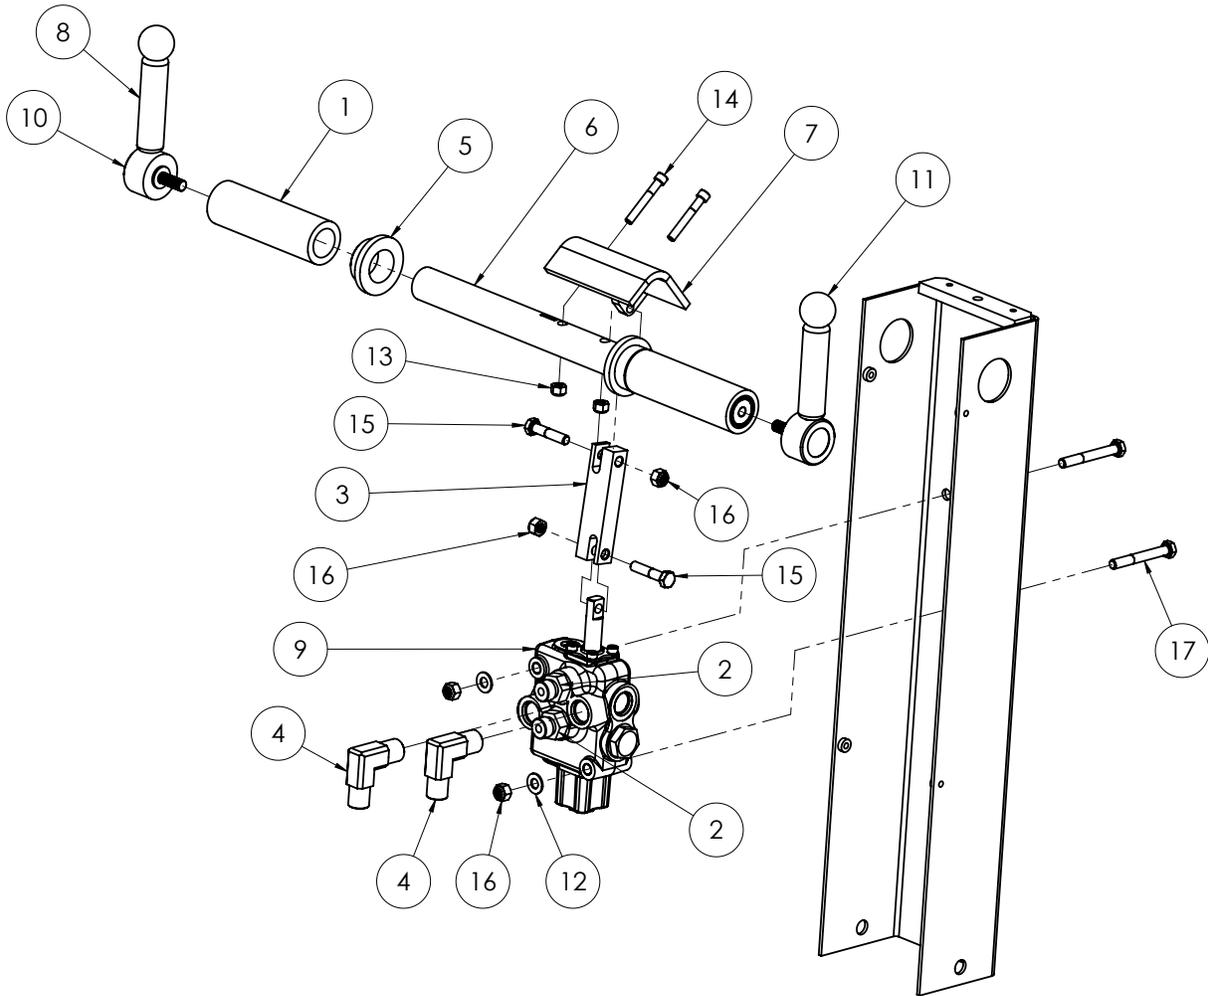

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	400024	Grip, Foam, 1"	2
2	400034	Fitting, FF1231-06-08	2
3	401434	Linkage, Valve, Handle	1
4	5280-118	Adapter, Hydraulic, 90 Deg, -6M ORFS, -8M ORB	2
5	6280-607	Bushing, Handle Bar	2
6	6280-608	Weldment, Handle Bar	1
7	6280-613	Bracket, Valve Connector	1
8	70623	Grip, Foam	2
9	70624	Valve, Single Spool, Tapered	1
10	70636	Lever, Adjustable, Right Hand	1
11	70637	Lever, Adjustable, Left Hand	1
12	73351	Washer, Flat, 5/16, SAE	2
13	73008	Nut, Hex, Nylon Insert, 1/4-20	2
14	73066	Bolt, SHCS, 1/4-20x1.75	2
15	73334	Bolt, Hex Head Cap 5/16-18x1-1/2	2
16	73322	Nut, Hex, Nylon Insert, 5/16-18	4
17	73327	Bolt, Hex Head Cap 5/16-18x2 1/2	2

# Parts List and Diagrams


## ADJUSTMENT ROD

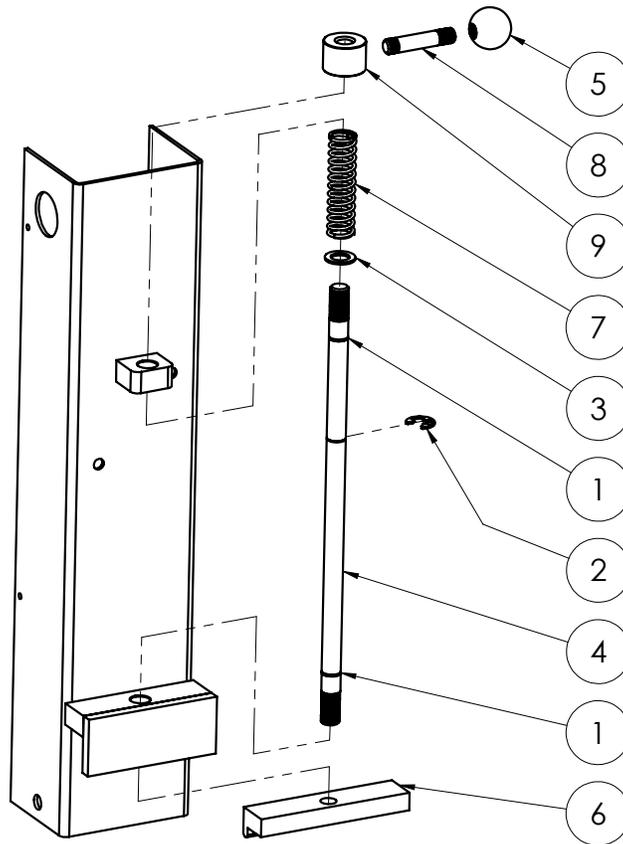

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	402197	O-ring, .489 ID X .629 OD X .070 W	2
2	402200	E-Clip, Shaft, .625	1
3	402201	Washer, .625 ID x 1.000 OD	1
4	402219	Rod, Adjustment, Large, 3X Groove	1
5	6280-606	Handle, Ball	1
6	6280-611	Lock, Adjustment Bar	1
7	92800-12	Spring, Adjustment, 3.5"	1
8	92800-98	Rod, Adjustment, Short	1
9	92800-99	Collar, Adjustment Rod	1

# Parts List and Diagrams

## SPEED CONTROL KNOB

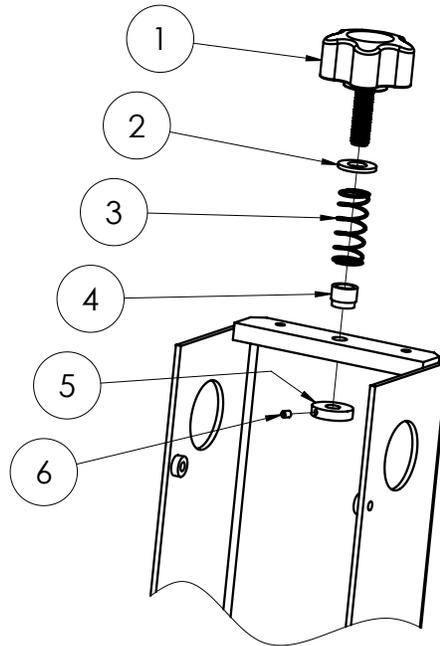


ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	70638	Knob, Adjustable, 1-1/4"	1
2	73263	Washer, Flat SAE Zinc 3/8	1
3	402290	Spring, .66"OD x 1.50"L x .049"w	1
4	402256	Sleeve, Knob, Commander Handle	1
5	401997	Stopper, Speed Control	1
6	404735	Screw, Set, Cup, 6-32 x 1/4, Black Oxide w/ Patch	1

## LABELS

ITEM NO.	PART NO.	DESCRIPTION	QTY.
1	403359-ROM-FR	Kit, Labels, 6280-COM, Romus	1

# Parts List and Diagrams

## WIRING DIAGRAM (230V)

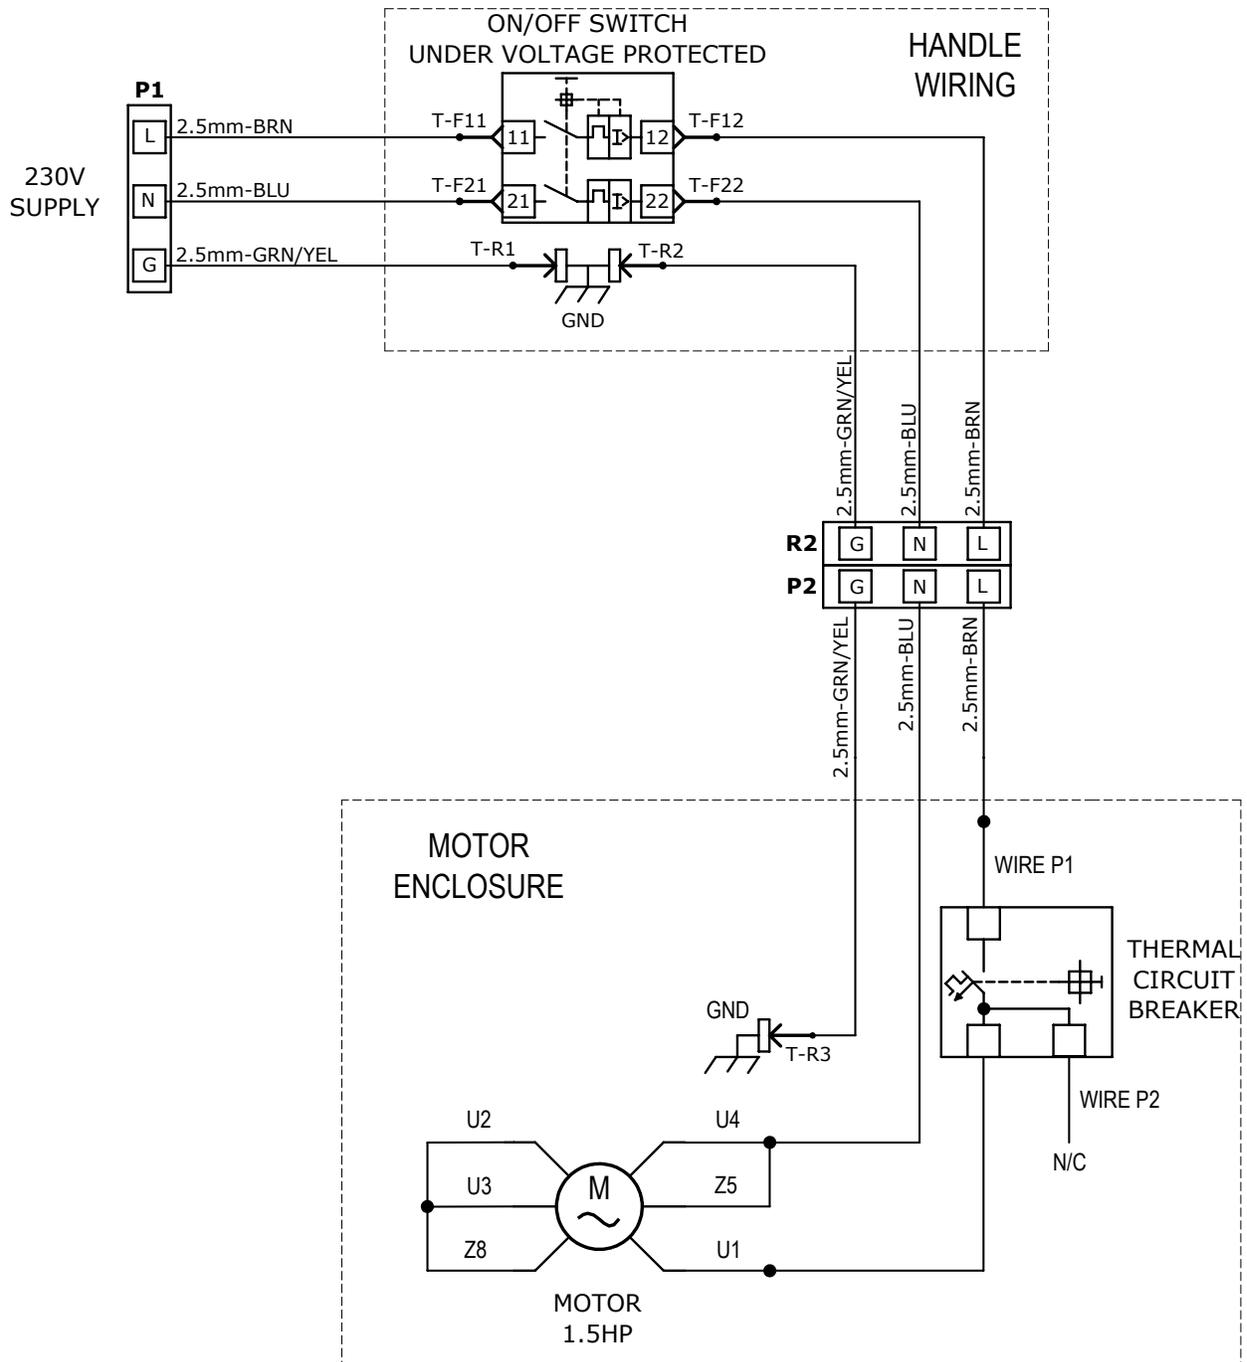

# Parts List and Diagrams

## HYDRAULICS

